


GLOSS METER MET91-060A



GLOSS METER MET91-060A

A glossmeter measures the specular reflection (gloss) of a surface. It determines the gloss by projecting a beam of light onto a surface at a fixed angle and intensity then measures the amount of reflected light at an opposite but equal angle.

MET91-060A GLOSS METER

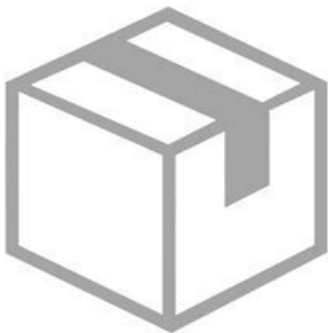

Product Image Coming Soon

SPECIFICATIONS

Model	MET91-060A
Measuring Angle	60°
Measuring Area (mm)	60°:9X15
Measuring Range	60°:0~1000 GU
Division Value	0.1 GU
Measuring Time	0.5 s
Repeatability	0~100GU:±0.2GU 100-1000GU:±0.2G U %
Accurate	Conform with JJG696 first grade requirements of gloss meter
Auto Power-off Time	Within 30 s-120 s
Long-time Calibration	Automatically finished calibration
Language	Chinese English
Storage	35000(Basic mode SStatistic mode :15000; Continuous mode : 10000; QC mode: 10000)
Display	2.3 inch black and white screen
Size	160x52x84 mm
Weight	About 300 g
Power Supply	1 pc dry-cell battery(can measure 10000 times) or use USB Charge
Interface	USB & Bluetooth
PC Software	GQC6 QC software for quality report and more extended functions
Operation Temperature Range	0~40 °C (32~104 °F)
Storage Temperature Range	- 20~50 °C (-4~122 °F)
Humidity Range	< 85% RH, without condensation
Standard Accessories	User manual, calibration plate,USB cable, user manual, QC software (Download official website) calibration plate,user manual
Optional Accessories	Miniature printer

Centrifugen

Centrifugen

82 Wendell Avenue, STE 100, Pittsfield, MA, 01201, USA
Email: info@centrifugen.com | Website: centrifugen.com